



LEGENDE **LEGEND**

- A Terminal utilisateur
User terminal
- BS Sonde de température de reprise
Return temperature sensor
- KE Contact economie
Economizing contact
- KF Contact de fenetre
Window contact
- D Regulateur
Controller
- YC Electrovanne eau chaude
Hot water motorized valve
- YF Electrovanne eau froide
Cold water motorized valve
- 1 Borne de raccordement
Connection terminal

- Matériel à la charge du client
Material to be paid by the client
- - - Raccordement client
Client's wiring
- Section mini 2,5mm²
Mini section 2,5mm²
- - - Raccordement client
Section mini 2,5mm²
Client's wiring
- - - Mini section 2,5mm²

NOTA: Liaison installateur basse tension : fils de section de 1 mm² pour une distance maxi de 30 m. Le câble doit être torsadé et blindé avec blindage relié à la terre en 1 seul point.

NOTE: Low voltage installer's connexion: wires with for 1 mm² of section for 30 metres. The cable must be twisted and shielded with the shield connected to the earth in only point.

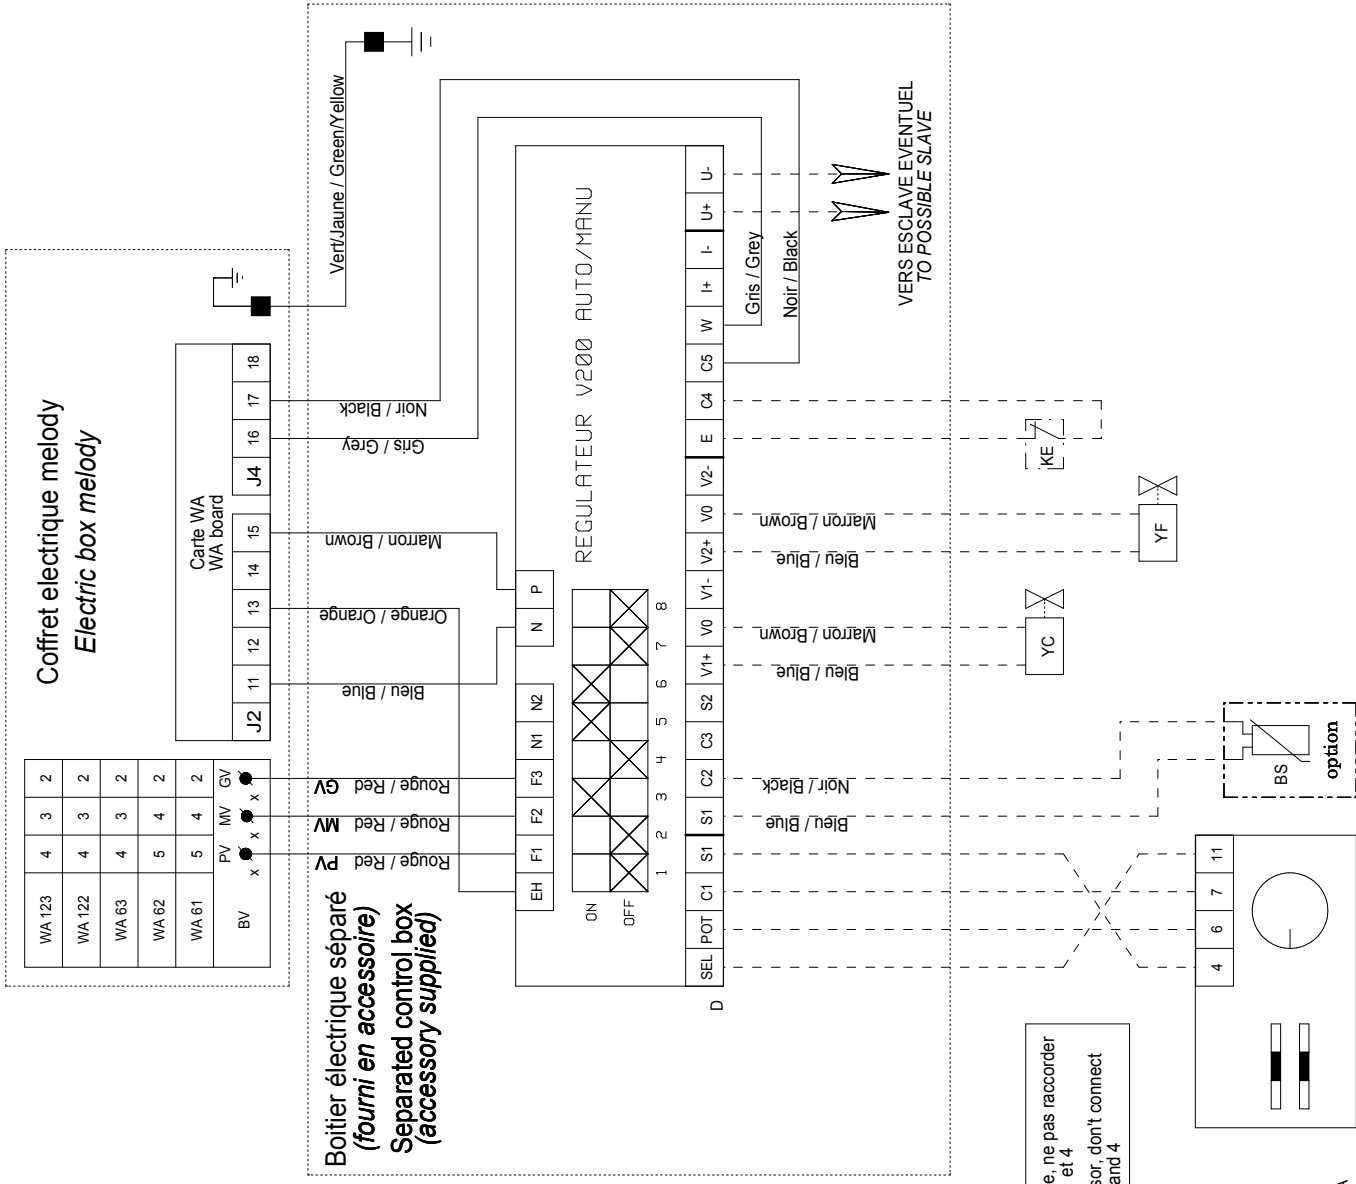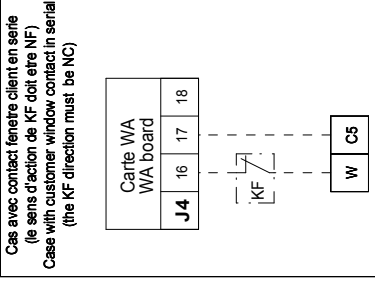

- Si sonde de reprise, ne pas raccorder de câble entre S1 et 4
- If air recovery sensor, don't connect a wire between S and 4

DESSINE : P-BASTIAND	INDICE : 10811	DATE : 07/05/2007	MODIFICATION :	APPAREIL : MELODY
REGULATION V200 - REGULATEUR MAITRE				
4 TUBES				
CIAT				
DESIGNATION : REGULATION V200 - REGULATEUR MAITRE				
CODE PLAN : 7161587				
INDICE : 00				